


ISO codes for pulltest	
ECE R 14 / FMVSS210	
bucket seat	

point of application	N
sensor location	cylinder of pull machine
dimension	force
	displacement

	ISO code	main location
1	T?TDSB000000FOX?	traction device shoulder belt
1	T?TDSB000000DSX?	traction device shoulder belt
2	T?TDLB000000FOX?	traction device lap belt
2	T?TDLB000000DSX?	traction device lap belt
3	T?TDCG000000FOX?	traction device center of gravity
3	T?TDCG000000DSX?	traction device center of gravity

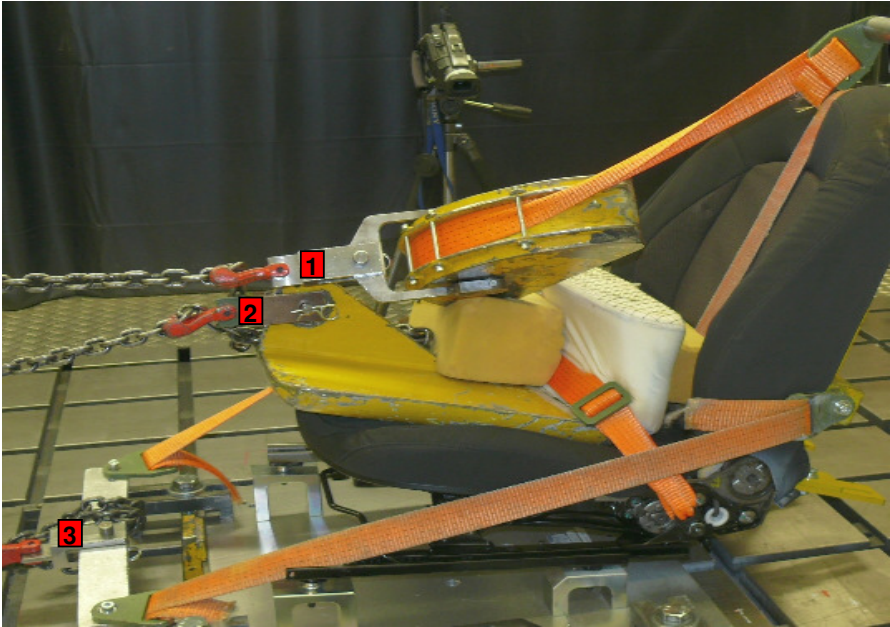


ISO codes for pulltest

ECE R 14 / FMVSS210

position 4-5 or 5-6

point of application	N
sensor location	cylinder of pull machine
dimension	force
	displacement

	ISO code	main location
1	T?TDSB000000FOX?	traction device shoulder belt
1	T?TDSB000000DSX?	traction device shoulder belt
2	T?TDLB000000FOX?	traction device lap belt
2	T?TDLB000000DSX?	traction device lap belt
3	T?TDCG000000FOX?	traction device center of gravity
3	T?TDCG000000DSX?	traction device center of gravity
4	T?BLOP000000DSX?	belt loop

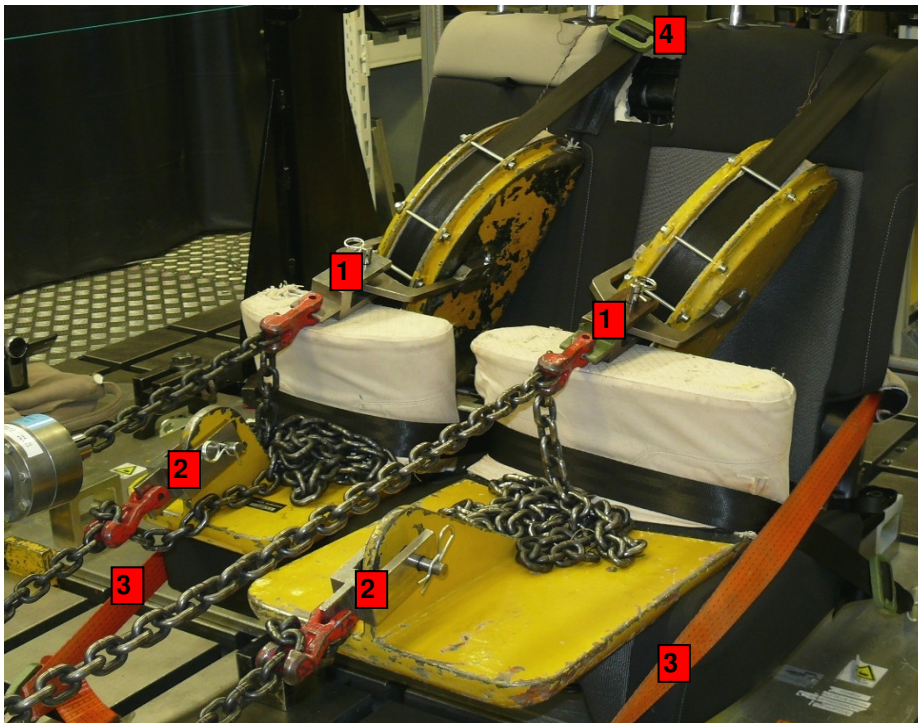


ISO codes for pulltest

ECE R 14 / FMVSS210

position 4-6 or 7-9

point of application	N
sensor location	cylinder of pull machine
dimension	force
	displacement

	ISO code	main location
1	T?TDSB000000FOX?	traction device shoulder belt
1	T?TDSB000000DSX?	traction device shoulder belt
2	T?TDLB000000FOX?	traction device lap belt
2	T?TDLB000000DSX?	traction device lap belt
3	T?TDCG000000FOX?	traction device center of gravity
3	T?TDCG000000DSX?	traction device center of gravity

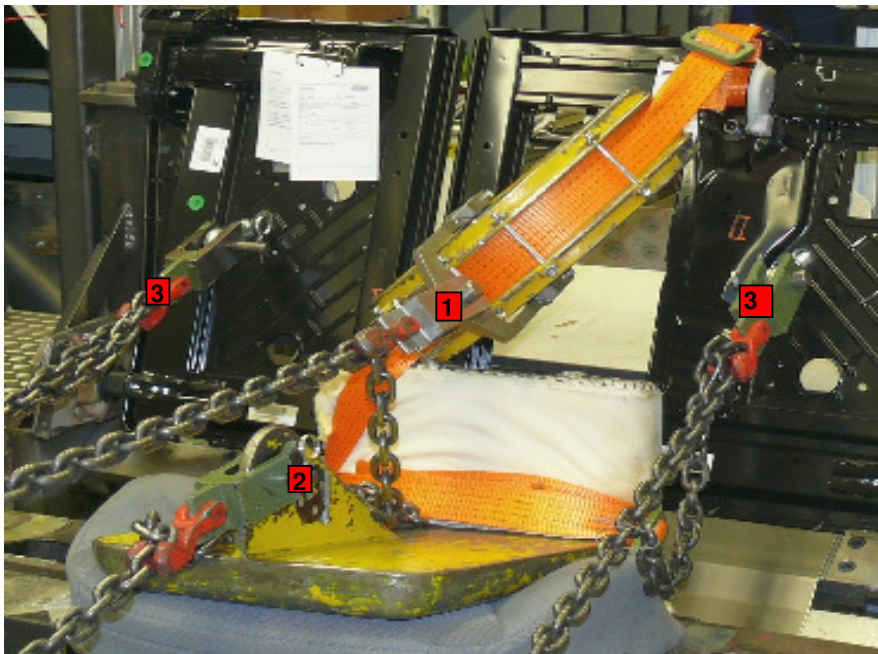

For the center of gravity of the 60% part always use the outer position number

ISO codes for pulltest	
ISOFIX ECE R14	

	point of application	N
	sensor location	cylinder of pull machine
	dimension	force
		displacement


	ISO code	main location
1	T?SFAD000000FOX?	Static Force Application Device
1	T?SFAD000000DSX?	Static Force Application Device



**ISO codes for pulltest
top tether pull / ADR34**

point of application	N
sensor location	cylinder of pull machine
dimension	force
	displacement

	ISO code	main location
1	T?TOPT000000FOX?	top tether
1	T?TOPT000000DSX?	top tether
2	T?TDCG000000FOX?	traction device center of gravity
2	T?TDCG000000DSX?	traction device center of gravity

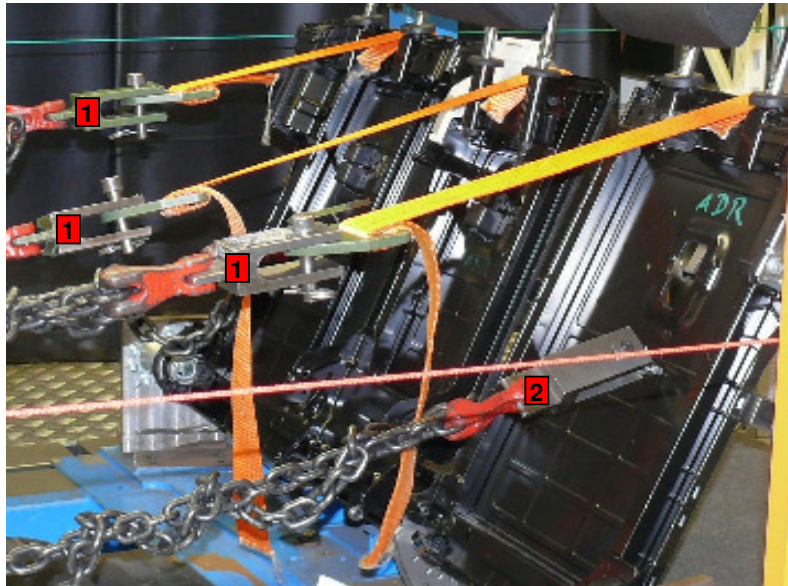

For the center of gravity of the 60% part always use the outer position number

ISO codes for pulltest head restraint ECE R17

point of application	N
sensor location	
dimension	force
	displacement
	moment (calculated)
	angle

	ISO code	main location
1	T?HEADHH0000FOX?	head
1	T?HEADHH0000DSX?	head
2	T? BAPN ??0000FOX?	(SAE) back pan
2	T? BAPN ??0000MOX?	(SAE) back pan
3	T? BAPN ??0000ANX?	in the ECE R17 it's called SAE back pan
	BAFO = back form????	HEFO = head form

